



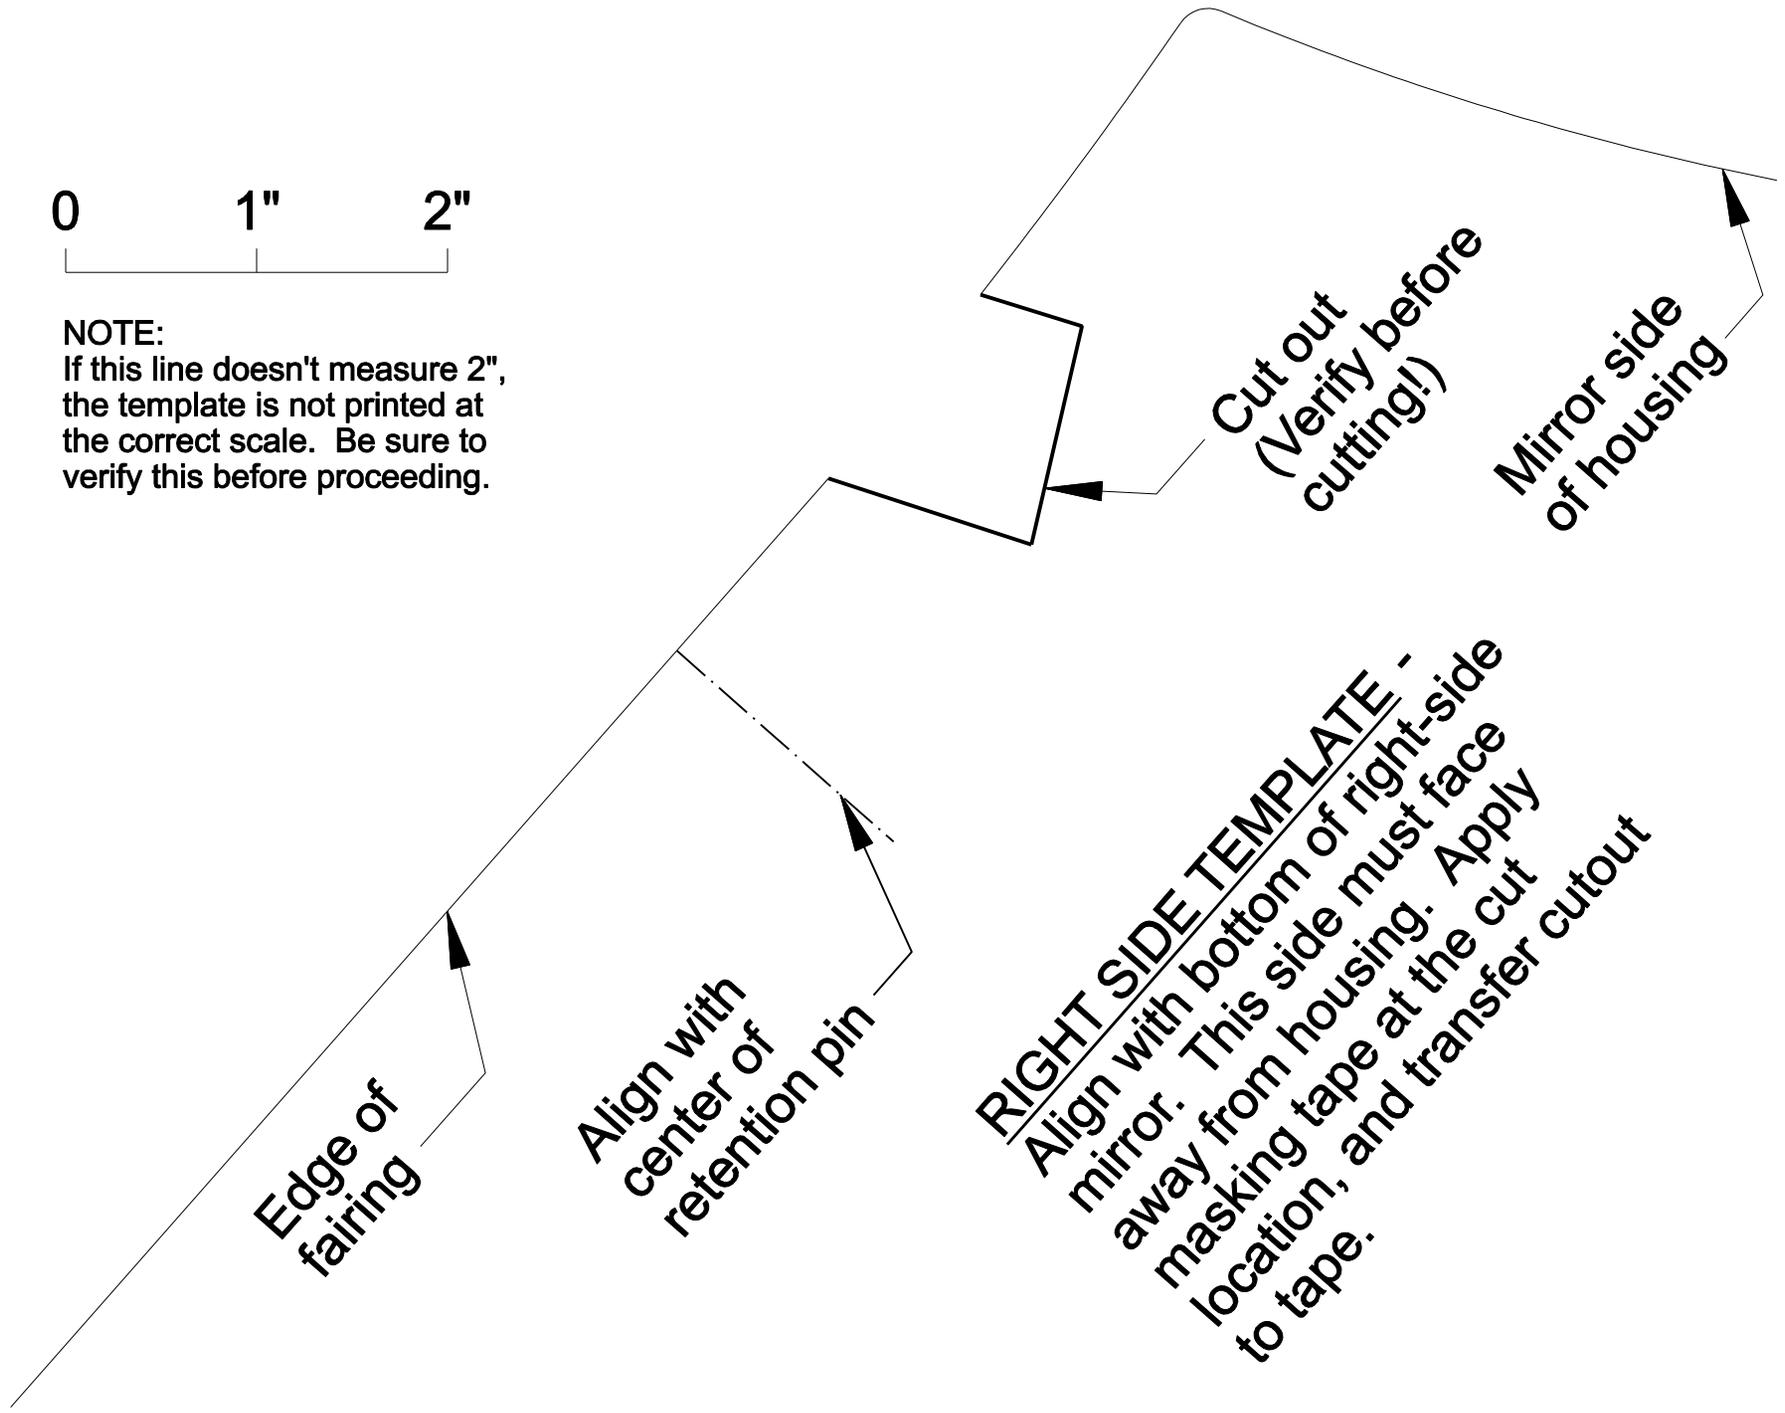

NOTE:
If this line doesn't measure 2",
the template is not printed at
the correct scale. Be sure to
verify this before proceeding.



RIGHT SIDE TEMPLATE -
Align with bottom of right-side
mirror. This side must face
away from housing. Apply
masking tape at the cut
location, and transfer cutout
to tape.

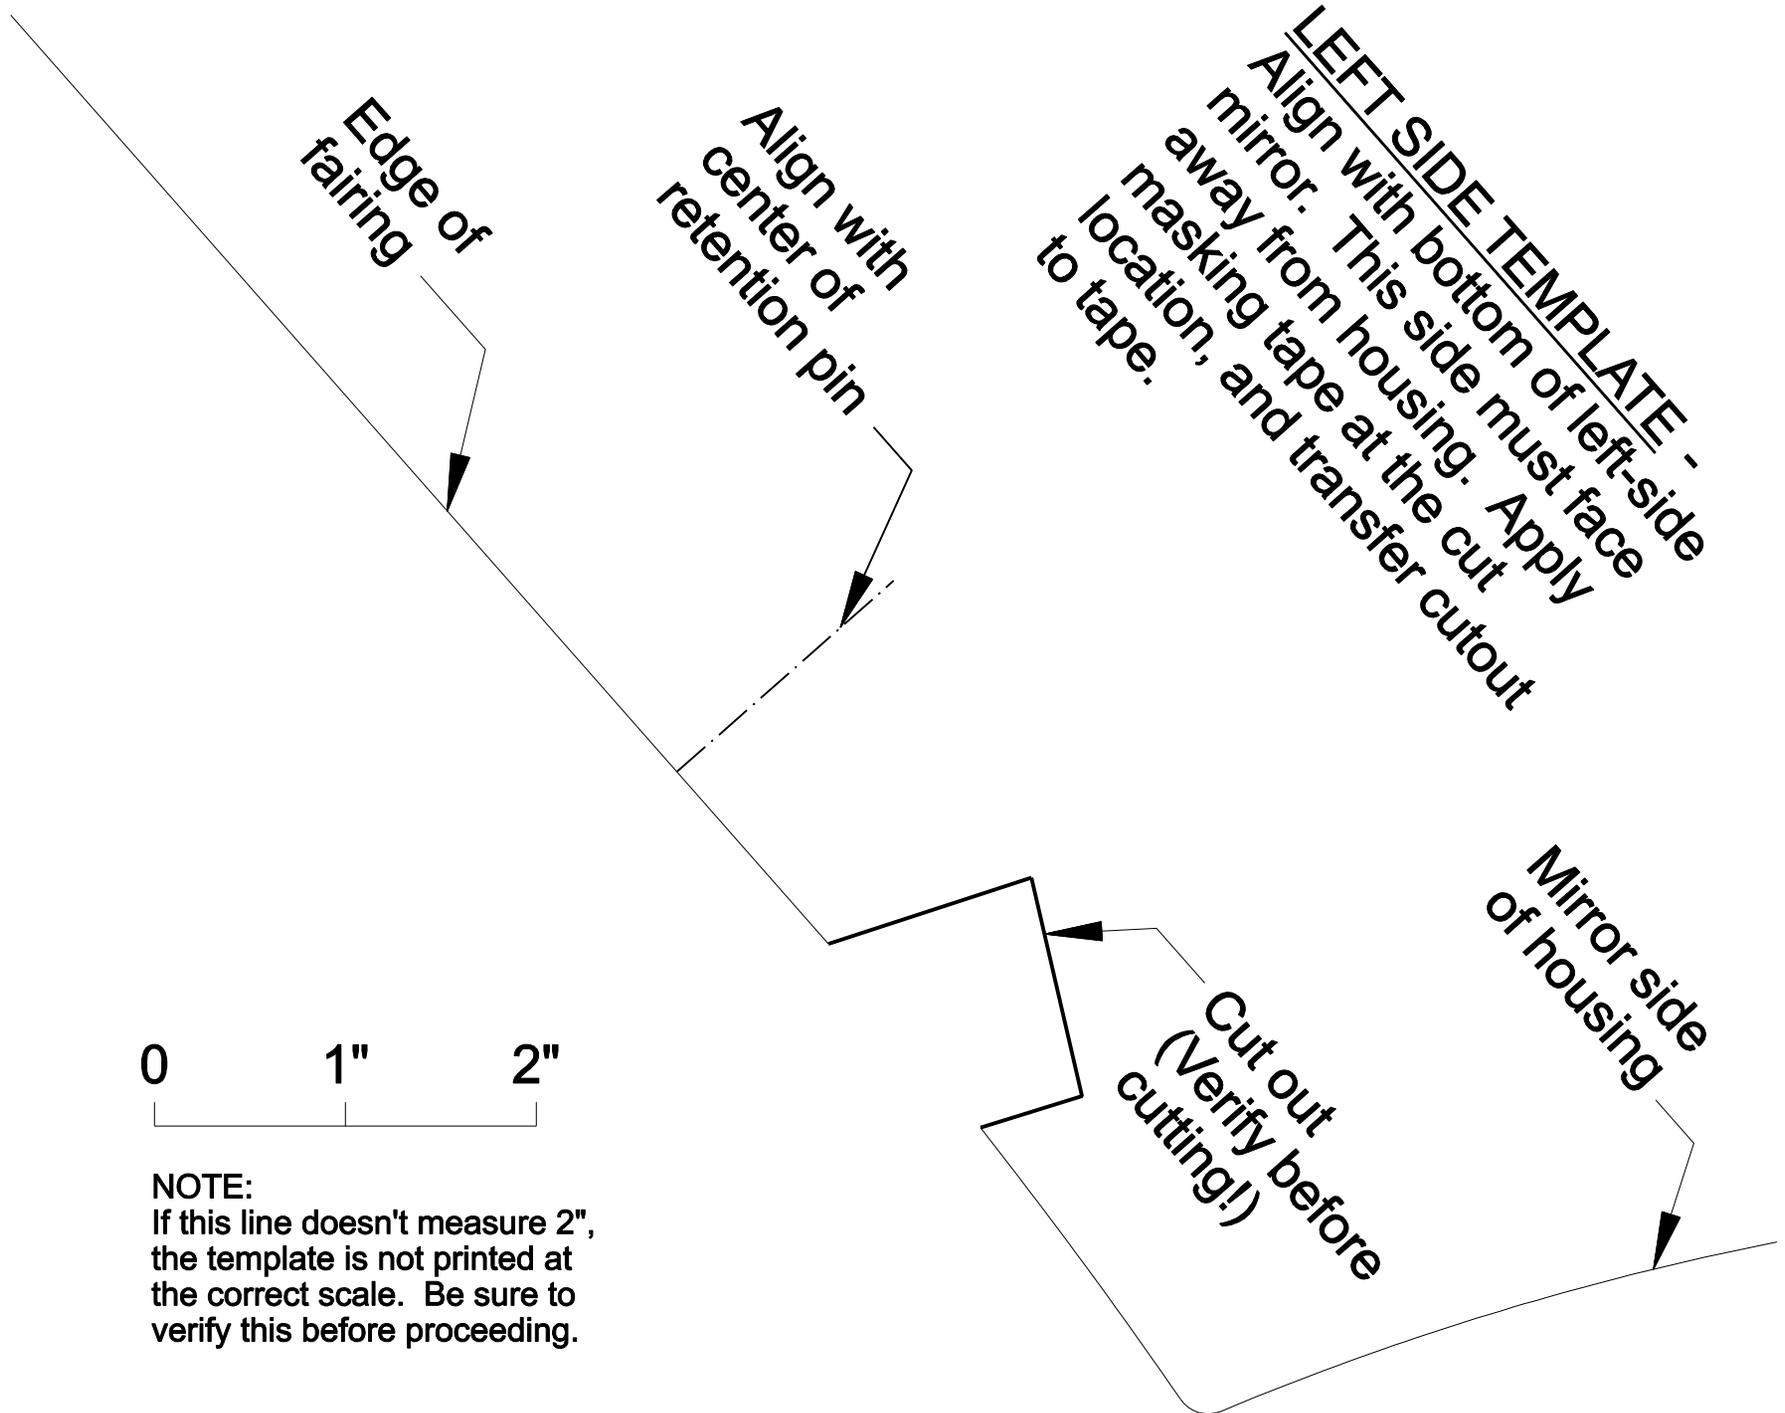


Edge of
fairing

Align with
center of
retention pin

LEFT SIDE TEMPLATE -
Align with bottom of left-side
mirror. This side must face
away from housing. Apply
masking tape at the cut
location, and transfer cutout
to tape.

Mirror side
of housing

Cut out
(Verify before
cutting!)

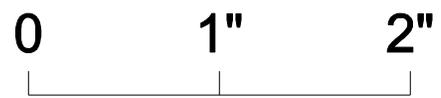

NOTE:
If this line doesn't measure 2",
the template is not printed at
the correct scale. Be sure to
verify this before proceeding.